EPSON PROJECTOR WIRELESS INSTRUCTIONS

The classrooms that have EPSON data projectors are able to support a wireless connection from a WINDOWS laptop computer. This connection will work for PowerPoint or other non-streaming applications. Do not use it for showing videos or sites such as YouTube etc.

You will need to have a small application on your computer. The following instructions will guide you through the installation process and then show you how to connect. If you already have the software installed, go directly to the Open EasyMP Network section on the next page.

INSTALL PROJECTOR SOFTWARE


- Click the Start button on the Taskbar.
- Click Computer on the right side of the Start Menu.
- Select the COMMONFILES folder.
- Scroll down to locate the Epson Data Projector File folder.
- Double-click on the Epson folder.
- Double-click the Epson14648 icon.
- ☐ The Open File-Security Warning window will display.




- Click the Run button.
- When the WinZip Self Extractor window displays, click OK.
- Another window will display, wait until the **Setup Language** window displays.
- English should be selected in this window. Click **Next**.
- Click Next in the Welcome to Install Shield window.
- Click Yes in the License Agreement window.
- Choose Next in the Destination Location window.
- ♣ The Setup Status window will display.
- Wait for the **Installation** to complete.
- The Interactive Services Window may display.
- Click View the Message.
- Click Yes and Return Now.
- Click Finish.

OPEN EASYMP NETWORK PROJECTION


- Click the Start button on the Taskbar.
- Click EasyMP Network Projection in the list of programs.
 - If the program doesn't display in the list, input **EasyMP** into the **Search** box.
 - * EasyMP Network Projection should appear at the top of the menu.
 - Click the link for the program.
- In the Connection Mode window (see illustration below), select Advanced Connection Mode.

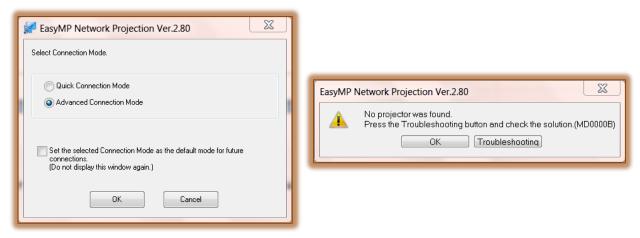


- Click OK.
- A message regarding the **Firewall** may display.
- If that happens, click the **OK** button.
- Another message will display stating, **No projector was found** (see illustration above right).
- Click the **OK** button.
- 🗸 The **Advanced Connection** window will display.

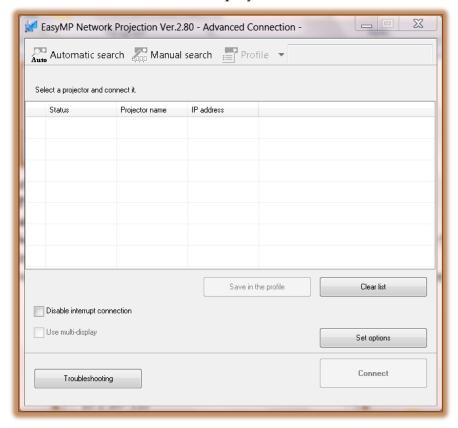

- Click the Manual Search tab.
- In the **Manual Search** dialog box (see illustration below), input the **IP Address** that is posted at the **front of the room**.
 - This is the nine digit number with 3 dots (see illustration below).
 - 4 You will have to complete this procedure for the projector in each room where you teach.

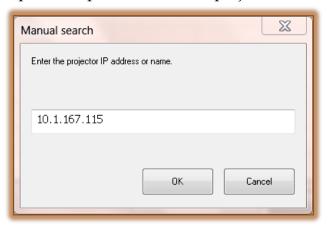

- Click OK.
- Click the checkbox next to the Projector Name.
- Click the Disable Interrupt Connection checkbox (see illustration below).

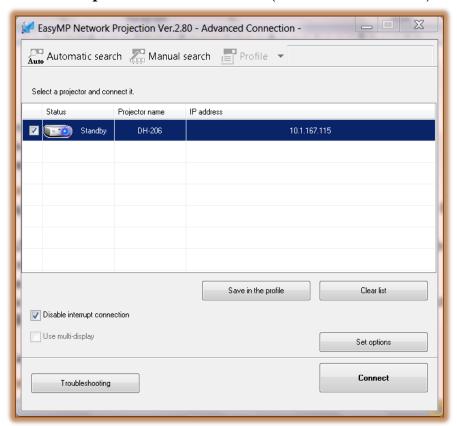

Click the Connect button.

PROJECTOR REMOTE

Press the **On/Off** button if the projector is not on. This is the **Red** button on the upper left side of the **Projector Remote**.

- Click the LAN button which appears on the right side of the second row of buttons.
- Right-click on the **Desktop** of your computer.
- Select Screen Resolution from the list of options.
- If you have a program open, please minimize the window to access the desktop.
- \blacksquare Change the **Resolution** to 800 x 600.
- Click OK.
- In the Display Settings window, click Keep Changes.

TURN PROJECTOR OFF

- Press the **On/Off** button on the **Projector Remote**.
- Press the button a second time.
- The projector will turn off. (If will not restart until it completes a three (3) minute cool down cycle.)

PROJECTION TOOLBAR

The Projection Toolbar will show up, but in most cases the only option you need is the **Disconnect** button. To display just this button:

- Click the arrow on the far right side of the Projection Toolbar.
- Click the Simple option.
- All the buttons except the **Disconnect** button will be hidden.

DISCONNECT FROM EASYMP NETWORK PROJECTION

When your session has ended, click the **Disconnect** button to close the **EasyMP Network** Projection program.