


## Turn Power On/Off

The Main Power Switch is on the left side of the machine. When this switch is turned off, the Main Power light on the right side of the Control Panel will go off. You should use this switch only when it is necessary.

### TURN ON MAIN POWER

- ☞ Check to make sure the power cord is firmly plugged into the wall outlet.
- ☞ Open the **Main Power Switch Cover**.
- ☞ Turn on the **Main Power Switch** (see illustration below).

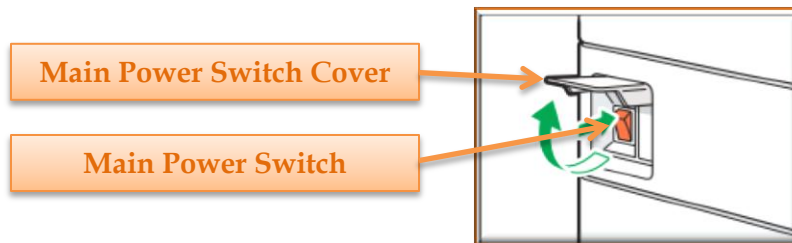

- ☞ The **Main Power Indicator** (see illustration above), which is located on the right side of the **Control Panel**, will go on.

### IMPORTANT

- ☞ Make sure you **DO NOT** turn off the **Main Power** immediately after turning it on.
- ☞ Turning the power off immediately after turning it on can damage the hard disk.
- ☞ This can lead to a malfunction of the machine.

### TURN OFF MAIN POWER

- ☞ Open the **Main Power Switch Cover**.
- ☞ Turn off the **Main Power Switch** (see illustration above).

### IMPORTANT

- ☞ Once the **Main Power Switch** is turned off, wait a few seconds before turning the power back on.
- ☞ If the **Turn Main Power Switch Off** message appears turn the machine off and wait for the **Main Power Switch Indicator** to turn off.
  - ★ Once the **Main Power Switch** is turned off wait **10 seconds** or more to turn the machine on again.
  - ★ **NEVER** turn the power back on immediately after turning it off.
- ☞ **DO NOT** turn the power off while the machine is in operation.
- ☞ Make sure you turn off the **Main Power Switch** before unplugging the machine and make sure the **Main Power Switch Indicator** turns off.
  - ★ Failing to do this could result in damage to the hard disk or memory.
  - ★ This could cause the machine to malfunction.

### CAUTION

- ☞ Make sure you pull the plug, not the cord when disconnecting the power cord from the wall.
- ☞ Pulling the cord can cause damage to the power cord.